

OSAKA/NARA DAY BED

ASSEMBLY INSTRUCTIONS

THESE INSTRUCTIONS APPLY TO THE FOLLOWING MODELS:

- Osaka day bed with and without backrest
- Nara day bed with and without backrest

We recommend two people to assemble the day beds.

*Illustrations are not to scale.
Please note, fittings differ depending on if you've ordered a backrest or not.*

FITTINGS FOR ASSEMBLY


(the only other tool you'll need is a cross-head screwdriver - we do not recommend the use of a drill for assembly)




4x SCREWS




4x WASHERS

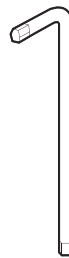

1x HEXAGON
KEY

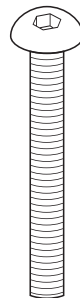

4x HEX KEY
BOLTS

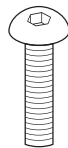


4x SMALL HEX
KEY BOLTS*



4x MINI WOODEN
DOWELS*


**Only included for beds with a backrest*

1.

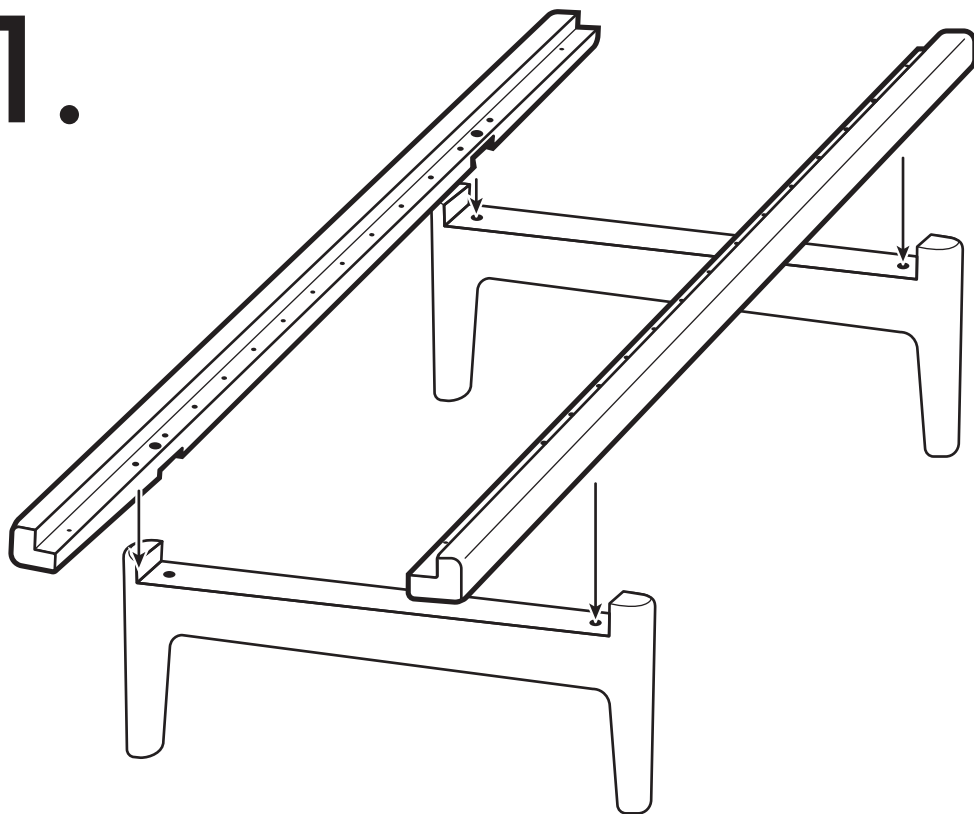


Stand up the legs of the day bed and lay the side rails in place across them. The slots on the underneath of the side rails should line up with the legs.

Please note, if you have ordered a day bed with a backrest, your leg sections will look like this.

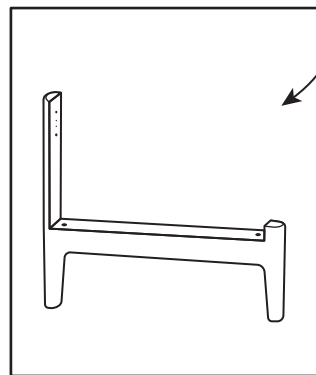


2.

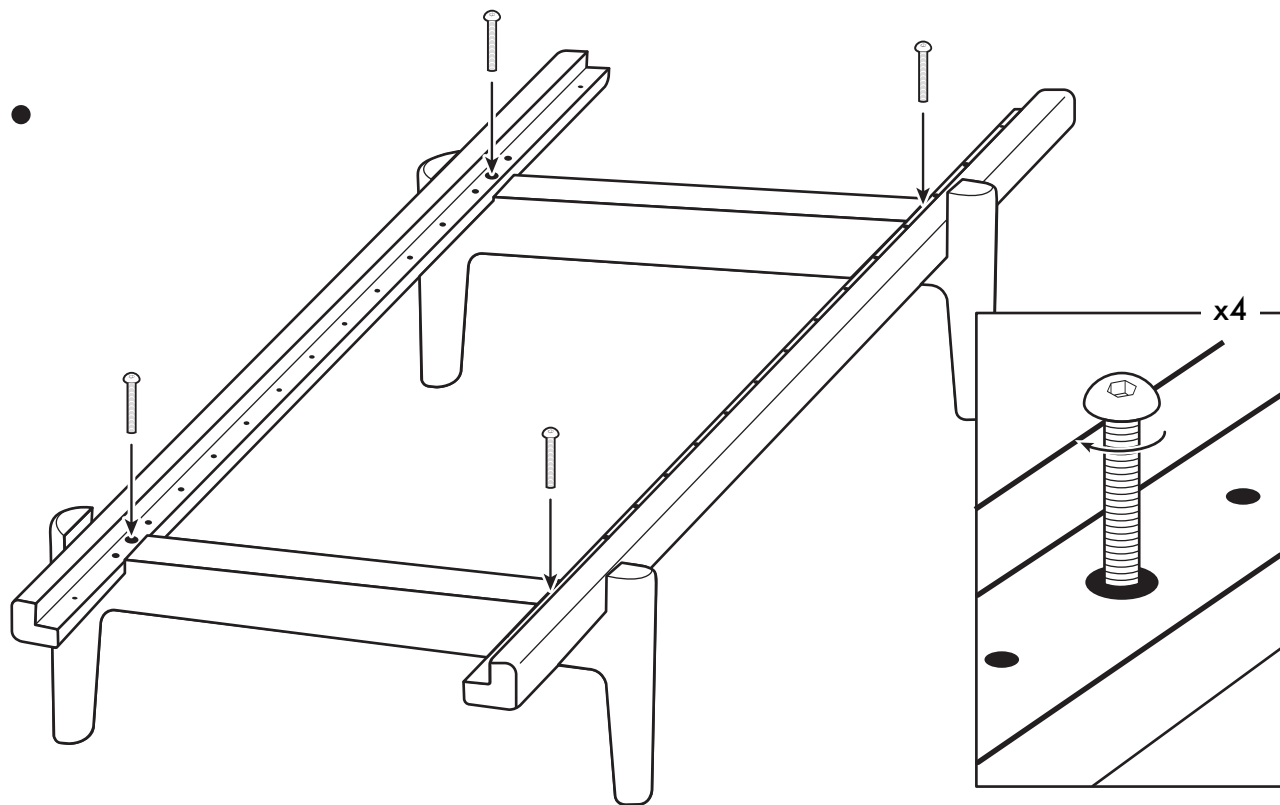

Thread the hex key bolts through the side rails and into the legs at all four corners. **DO NOT** tighten fully or use the allen key just yet. Hand-tighten to hold everything in place for now.




Note: if you've ordered the day bed with a backrest, you'll have four large and four small hex key bolts. Use the larger ones here.

3.

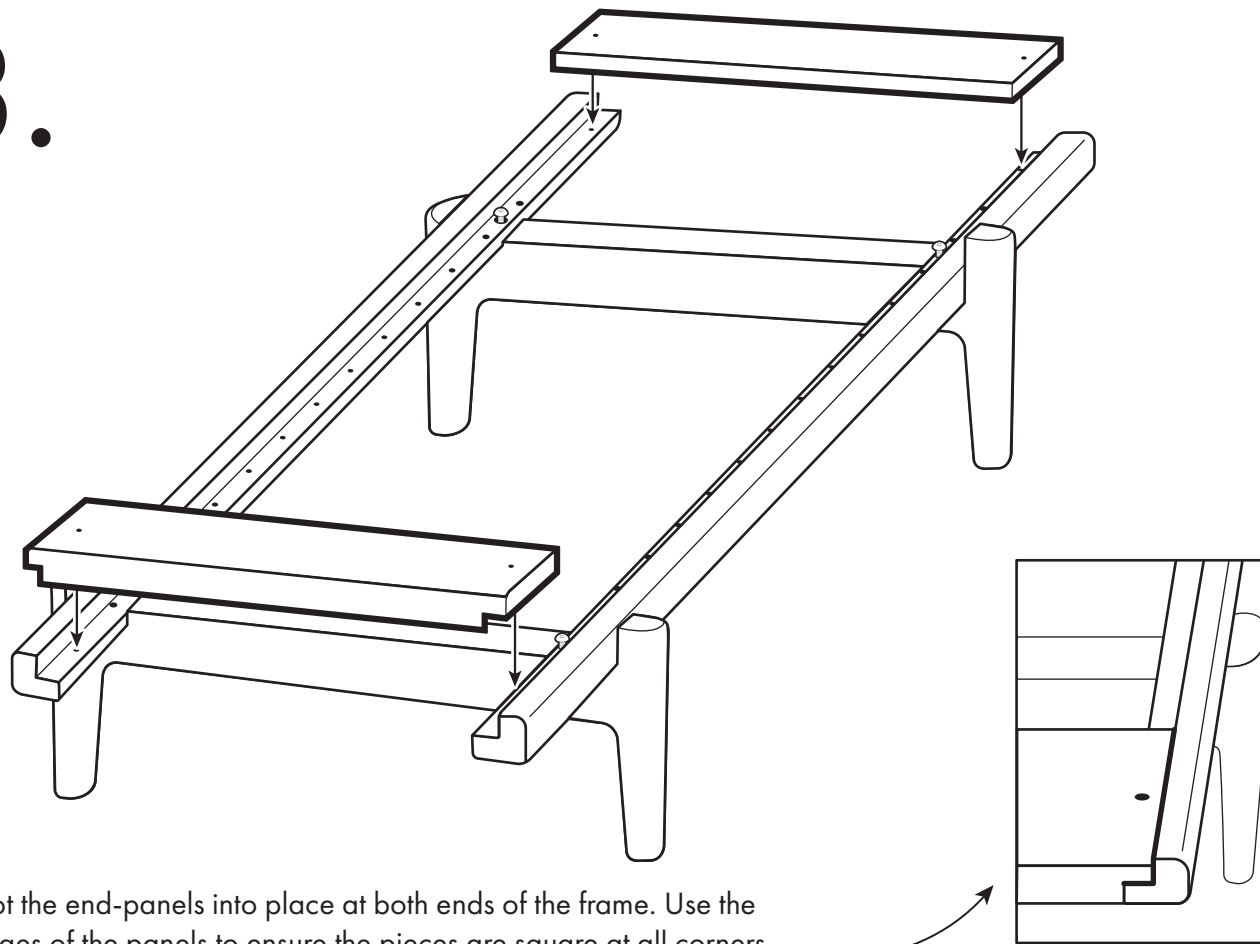

Slot the end-panels into place at both ends of the frame. Use the edges of the panels to ensure the pieces are square at all corners.

4.

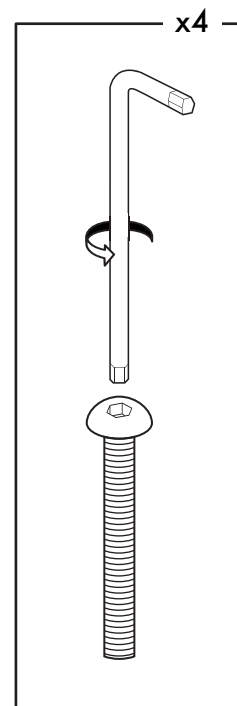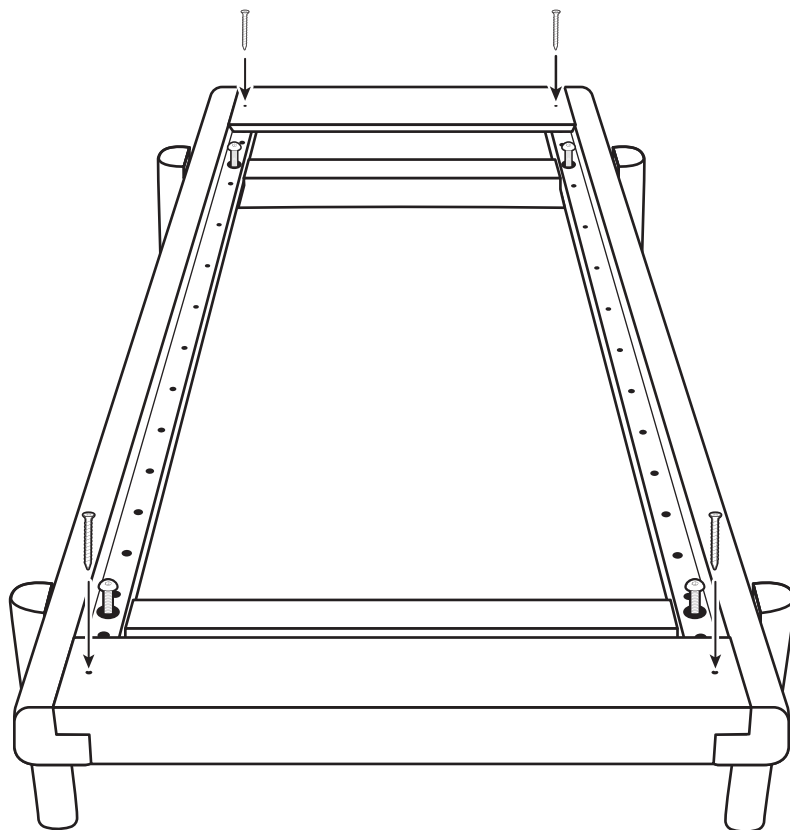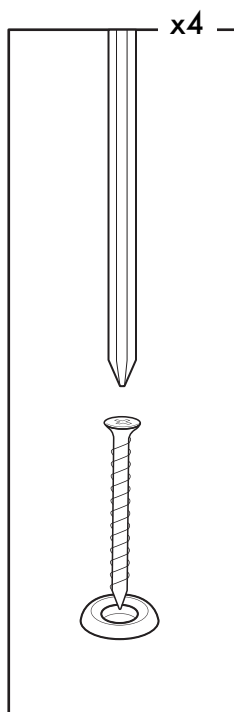


Once you're happy that everything is square, go in and tighten the hex bolts with the Allen key provided, and attach the end panels using the screws with a cross head screwdriver (not provided). Be sure to place the washers over the holes before inserting the screws.

**If you've ordered a bed
without a backrest, please
skip to step 8.**


**If you've ordered a bed
with a backrest, please
proceed to step 5.**

5.

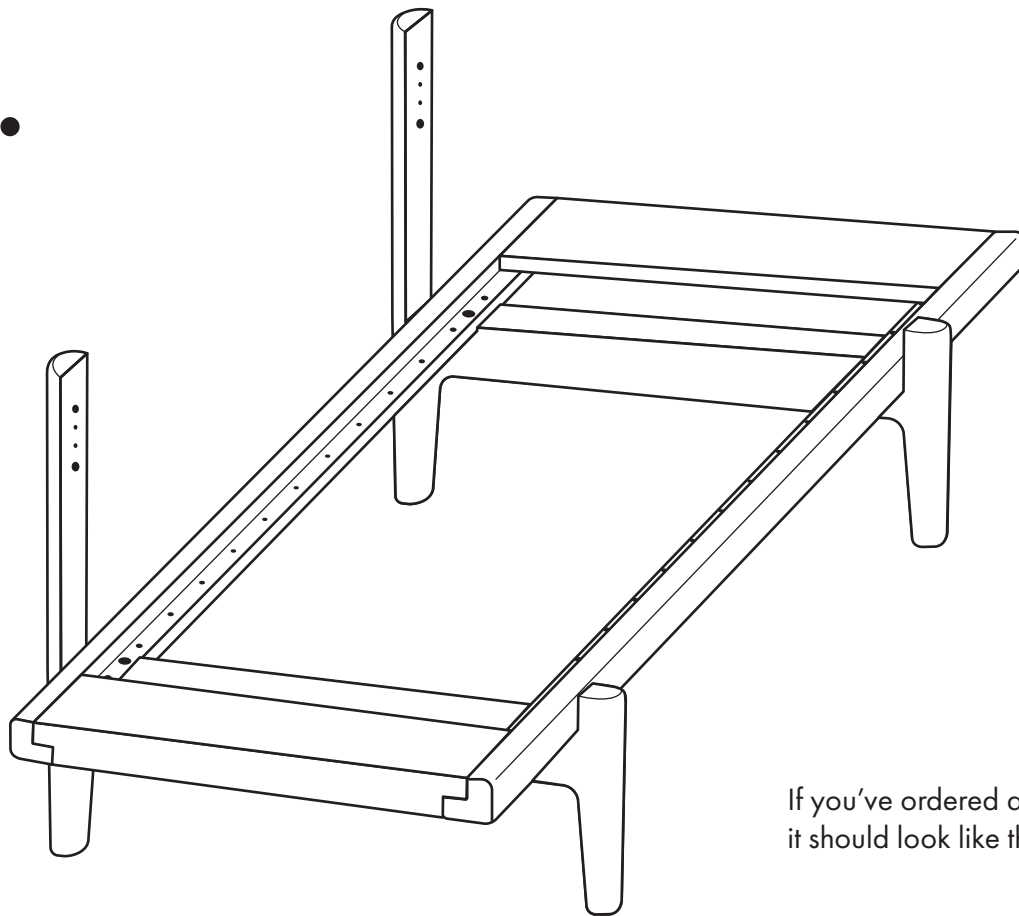



If you've ordered a bed with a backrest, it should look like this at this point.

6.

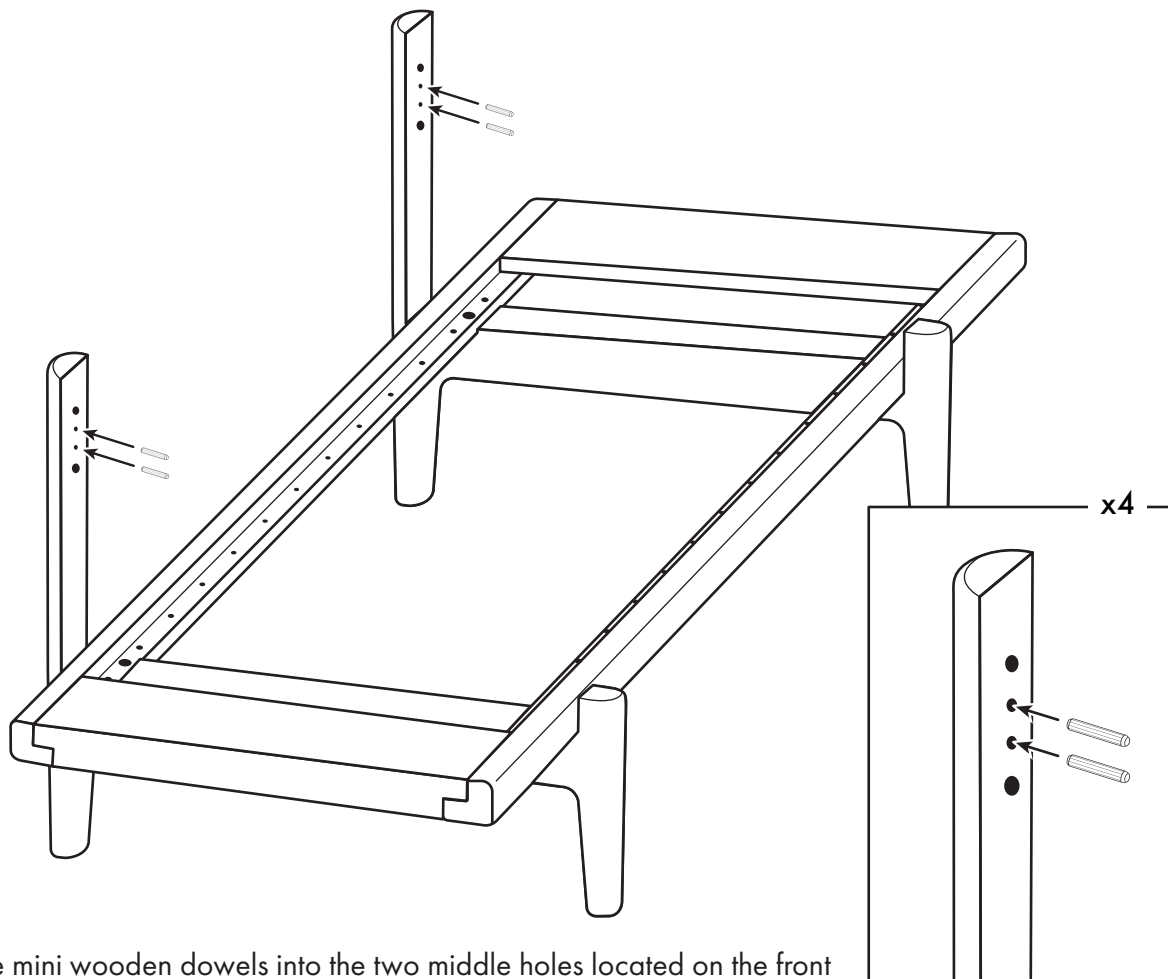

Now, insert the mini wooden dowels into the two middle holes located on the front of the backrest legs. Give them a soft tap with a mallet if required (not provided).


7.

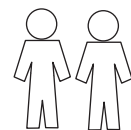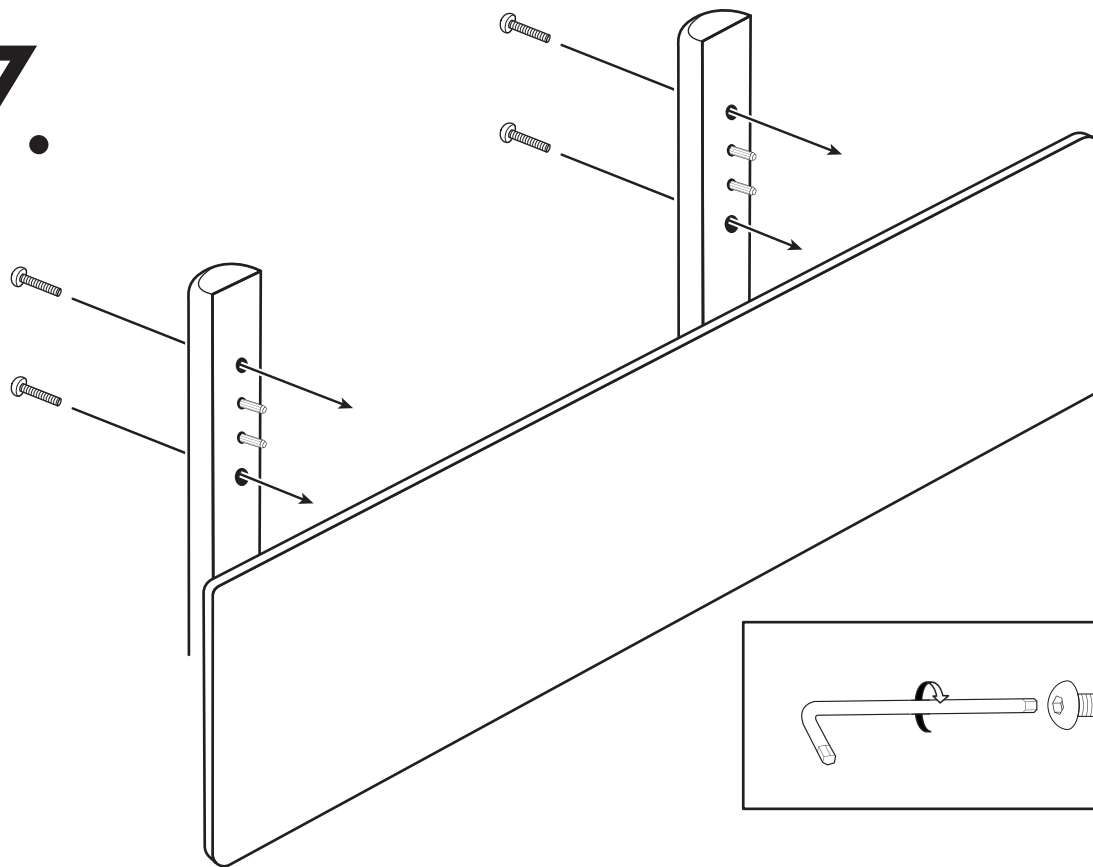

We recommend
two people for
this step.


Line up the backrest panel with the dowels on the backrest legs. The holes should line up. Push the headboard into place using the dowels to anchor it. Then, thread the small hex key bolts through the legs and into the backrest panel. Tighten with the Allen key provided.

8.

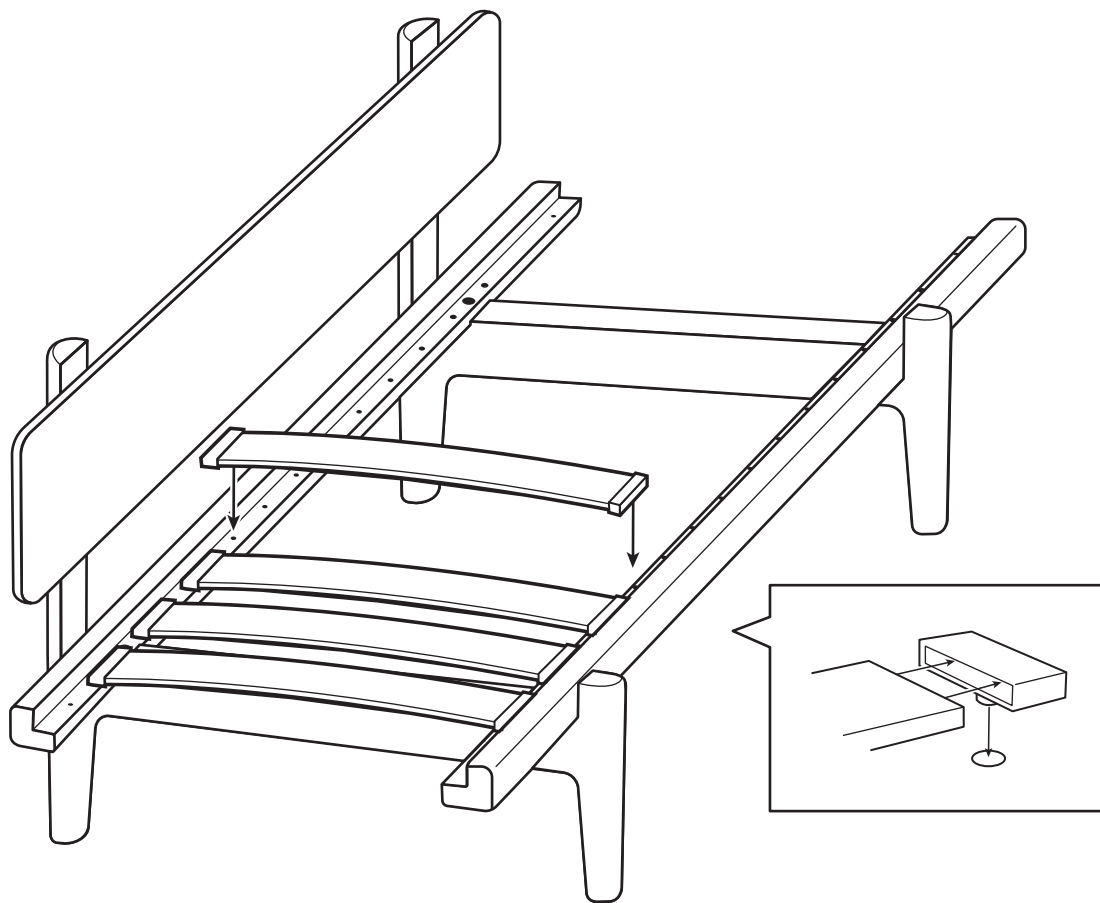


Lastly, affix the end caps onto the slats, then slot the slats into place down the whole length of the day bed.

9.

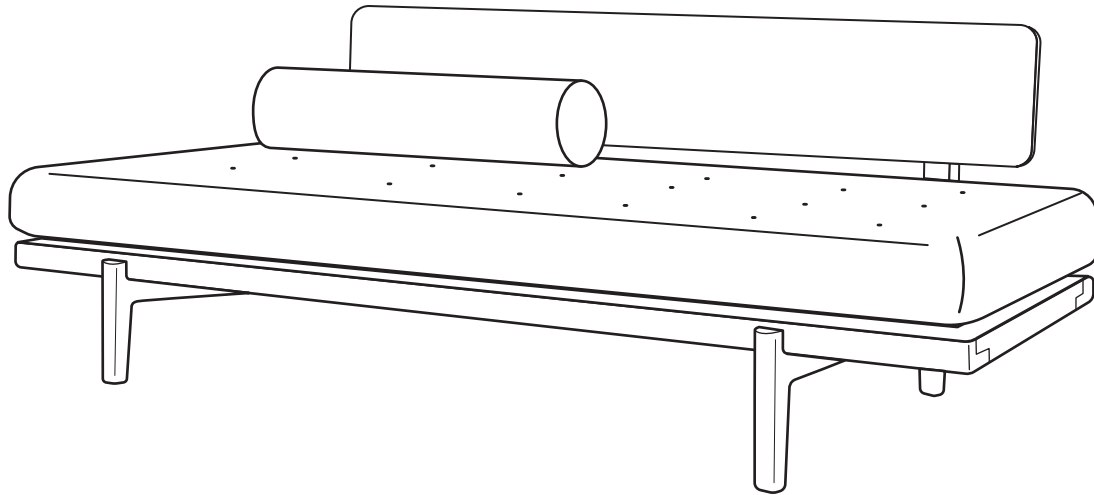

Pop your mattress and bolster cushion on to the frame and you're done.
Step back and admire your handiwork!

THANK YOU FOR BUYING A BED FROM

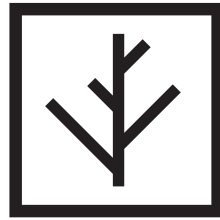

**NATURAL BED
COMPANY**

DEVONSHIRE POINT, 123-125 FITZWILLIAM STREET, SHEFFIELD, S1 4JP

0114 272 1984

sales@naturalbedcompany.co.uk

www.naturalbedcompany.co.uk